E CANTER E STER E STER E STER

8.55t / Large Battery Pack



GVM

BATTERY SIZE

POWER/TORQUE

8550kg

124_{kWb}

129 kw / 430 Nm

• Zero Exhaust Emissions

• Extended range

DAIMLER TRUCK

FUSO.COM.AU

ECANTER SPECIFICATIONS GVM (optional)

MODEL


4X2 8.55T XLWB FECXKHRESFAC 4X2 8.55T XXLWB FECXKKRESFAC

WHEEL BASE 4450mm 4750mm

8550kg 8550kg

Electric Drive/Motor

Туре	Permanent magnet synchronous motor S40
Power	129kW peak / 110kW continuous
Torque	430Nm peak / 250Nm continuous
Cooling	Coolant and water mix

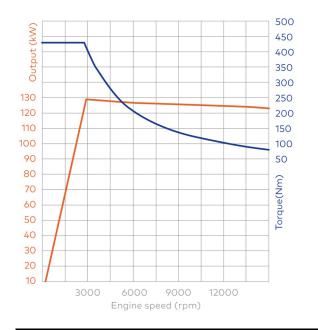

High Voltage Battery			
Туре	LFP lithium iron phosphate		
Capacity	124kWh / 3 battery pack		
Cooling	Water & Coolant mix		
Charging	CCS2		
AC Charging	up to 22kW (6hrs)		
DC Charging	up to 104kW (1.3hrs)		
Notes	*Charging times are based on theoretical numbers		

Electrical	
Voltage	12V / 24V with Battery Equalizer
Battery Capacity	24V 80Ah + 60Ah with equalizer for Body Builder
Headlamp Type	LED
Taillamp Type	LED
Daytime Running Lamps	LED

Version	Single Reduction Gearbox
Type/Speeds	1 speed
Features	No Gear Changes In-Dash Gear Lever
Ratios	1:19.528
Front Axle	
	Reverse Elliot 'l' Beam
Front Axle Type Capacity *	Reverse Elliot 'l' Beam 3400kg

Front Suspension

Туре

Laminated leaf springs with shock absorbers and stabilizer

Туре	De Dion tube (eAxle)
Capacity*	6000kg
Notes	*See MAX LOADING for vehicle capacity.
Rear Suspension	
Туре	Laminated leaf springs with shock absorbers
Max Loading	
Front	3400kg
Rear	6000kg
Total	8550kg
Options	
Options	Q05 - ePTO Flange system + Cab back control
	Q06 - ePTO Pulley system + Cab back control
Steering	
Гуре	Integral Power Assisted Ball and Nut
Steering Column	Tilt/Telescopic Adjustable with Lock
Brakes	
Гуре	Hydraulic Dual Circuit with Front and Rear Discs
eatures	ABS plus EBD Electronic Brake Distribution ABA5 Active Brake Assist 5
Park Brake	Electric park brake - disc park brake
Auxiliary	4 Stage regenerative brake
Wheels & Tyres	
Wheel Type	Steel Disc Rims
Wheel Size	19.5X6.75-129-11
Wheel Stud Pattern	6 Stud
Tyre Size All	225/70R19.5
Spare Tyre Carrier	Provided
Spare Tyre	Provided
Chassis	
Гуре	Ladder frame, channel section with reinforcement and
Width	crossmembers 850mm
Instruments	
Gauges	New Digital Display
	Speedometer
	Braking Mode
	Battery Percentage
	Range Temperature
	iomporadato

Airbag(s)	Driver's Air Bag	
Cab Cooling & Heating	Air Conditioner / Heater / Demister	
Accessory Power	12V Accessory Power Outlet / Cigar Lighter	
Driving	Fuso Multimedia Unit Keyless Central Locking Electric Windows Cup Holders 2 3 seats	



FUSO.COM.AU

ECANTER SP ECIFICAT NS GVM (optional)

MODEL

4X2 8.55T XLWB FECXKHRESFAC 4X2 8.55T XXLWB FECXKKRESFAC

WHEEL BASE 4450mm 4750mm

8550kg 8550kg

Cab Features

Туре	All Steel Forward Control Manual Tilt
Cab Structure	ECE-R29 Standard
Colour	Natural White
Interior	Fully Trimmed
Windscreen	Laminated Tinted
Windscreen Wipers	2 Speed + Intermittent Cycle with Integrated Washer Nozzles
Rear Vision Mirrors	Short and wide split mirrors
Seating Capacity	3
Seat Belts	2 x 3 point seat belts 1 x 2 point lap sash
Seat (driver)	ISRI Suspended with Weight Adjustment, LH Arm Rest and Lumbar Support
Seats (passenger)	Flat Folding, ISRI 2 Passenger Fixed Seat

Active Safety

Safety Systems	ABA5 - Active Brake Assist 5 ASGA - Active Sideguard Assist AVAS - Acoustic Vehicle Alerting System HSA - Hill Start Assist LDWS - Lane Departure Warning System ESP - Electronic Stability Program ABS plus EBD - Anti-lock Braking System plus Electronic Brake Distribution LED Head lamps and Tail lamps DRL - Daytime Running Lamps IHC - Intelligent Headlight Control High Voltage Interlock Loop
Reverse Warning	Buzzer
Notes	Active Safety Systems primary function is to provide driver assistance to increase road safety in events of driver inattentiveness. These systems do not allow for lack of attention whilst driving and should not replace safe and alert driving.

Passive Safety	
Airbags	SRS Airbag - Driver
Body Strength	ECE-R29 Cab Strength Compliant
Emergency Operational Decals	Internal & External
Seat Belts - Driver & Driver Assistant	3 Point ELR Lap Sash

Service Intervals


Interval*	30,000km or 12 Months (whichever occurs first)		
Warranty*			
Basic/Powertrain	5 Years / 200,000kms		
	8 Years / 200,000kms HV Battery Only		
Notes	* Please refer to Fuso Owners Warranty Booklet for additional terms and conditions.		
Performance			
Turning Circle (kerb to kerb -	A	В	
metres)	16.6	17.6	
Electronically Speed Limited to:	89km/hr		
Gradeability at Rated GVM (theoretical)*	20%		
Notes	*This is theoretical performance only. Actual performance may vary under different conditions		

Mass estimated*			
Front*	<mark>A</mark> 2080kg	<mark>B</mark> 2115kg	
Rear*	A 1880kg	B 1860kg	
Total*	A 3960kg	B 3975kg	
Notes	* Mass est. includes weight of oil, coolant, spare tyre carrier & bracket, spare tyre & disc wheel. Weights provided are subject to 3.5% variation +/-		
Dimensions mm		,	

Dimensions mm		
WFF (Width Front Fender) (mm)	1995	
WRA (Width Rear Axle) (mm)	2155	
WFT (Width Front Track) (mm)	1665	
WRT (Width Rear Track) (mm)	1660	
Width Frame (mm)	850	
A - Length Overall (mm)	A 7185	B 7735
C - Front Overhang (mm)	1140	
D - Wheelbase (mm)	A 4450	B 4750
G - Front Axle to Rear of Cab (mm)	525	
H - Rear of Cab to Rearmost Item Behind Cab (mm)	90	
I - Rearmost Item Behind Cab	Α	В
to Rear Axle (mm)	3835	4135
J - Frame, Rear Axle to End	Α	В
(mm)	1595	1845
P - Height Cab to Ground	Α	В
(mm)	2285	2280
Q - Height Cab to Frame (mm)	1505	
R - Height Rear Frame to Ground (mm)	846	





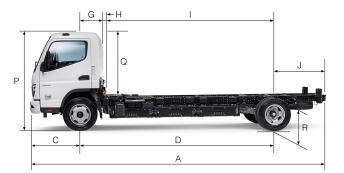



DAIMLER TRUCK

FUSO.COM.AU

ECANTER SPECIFICATIONS

MODEL 4 4X2 8.55T XLWB FECXKHRESFAC 4X2 8.55T XXLWB FECXKKRESFAC WHEEL BASE 4450mm 4750mm GVM (optional) 8550kg 8550kg



or visit fuso.com.au

Unless specified in writing herein the accessories, applications, bodies or equipment depicted in this are for illustration purposes only and may not be available from Daimler Truck Australia Pacific Pty Ltd. ABN 86 618 413 282 DTAuP. No representation or warranty whatsoever is given in relation to any accessories, applications, bodies or equipment or suitability of same that are shown herein that may be manufactured, supplied or fitted by a party other than DTAuP. DTAuP reserves the right without notice or obligation to discontinue or make changes to the colour, designs, materials and specifications of the products and options referred to herein at any time. For the most current information and in order to ascertain which accessories, applications, bodies and equipment are available from DTAuP please contact your authorised FUSO dealer. Fuso is a registered trademark of Daimler Truck Australia Pacific Pty Ltd. Copyright DTAuP. Reproduction in whole or part prohibited without written approval. Valid from 20-Jun-23.

